


Vehicle conversion

ANCHORAGE SINGLE POINTS

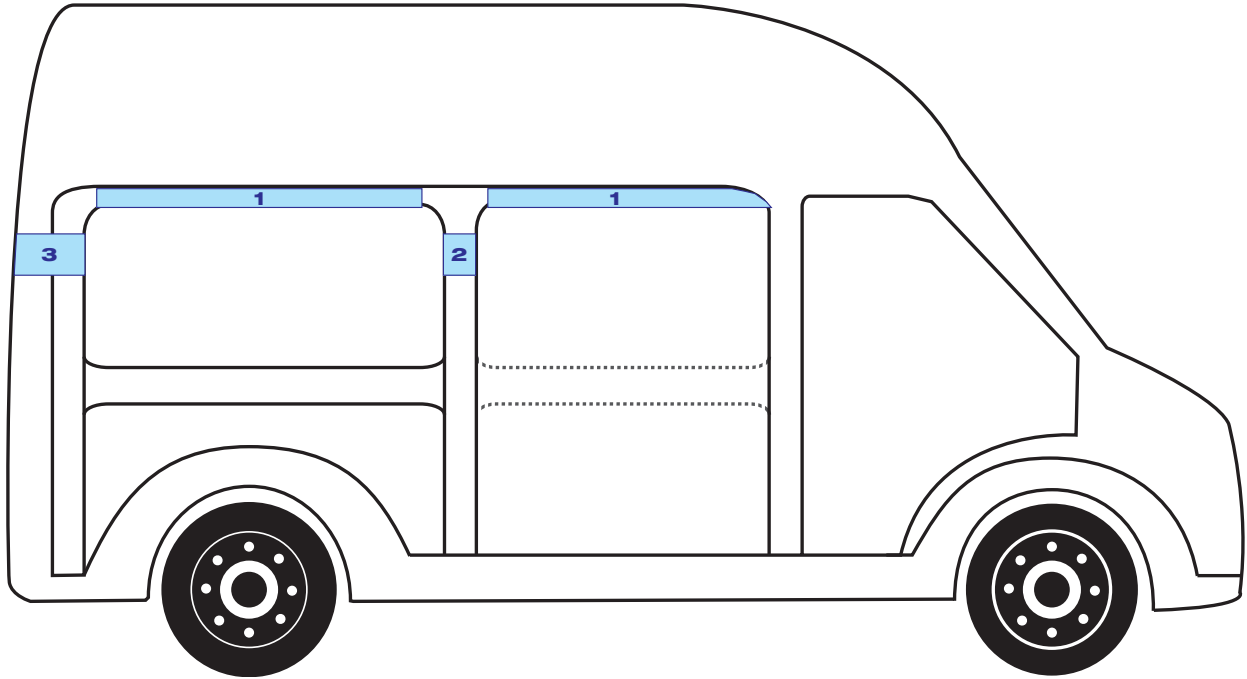

Vehicle Model	Area	Part No. with Trim	Part No. without Trim
Boxer/Ducato/Jumper	1	1001 9565	1001 9564
	2	1001 9564	1001 9564
	3	1001 9563	1001 9562
Ford Transit	1	1001 9665	1001 9665
	2	1001 9574	1001 9574
	3	1001 9564	1001 9564
Ford Transit Custom	1	1001 9564	1001 9564
	2	1001 9573	1001 9573
	3	1001 9574	1001 9574
Mercedes-Benz Vito	1	-	-
	2	1001 9679	1001 9679
	3	1001 9678	1001 9679
VW Crafter / MB Sprinter	1	1001 9676	1001 9676
	2	-	-
	3	-	-
NV300 / Vivaro / Trafic	1	1001 9564	1001 9564
	2	1001 9564	1001 9564
	3	1001 9574	1001 9574
NV400 / Movano / Master	1	1001 9577	1001 9576
	2	1001 9564	1001 9564
	3	1001 9562	1001 9562
Volkswagen T5/T6	1	1001 9574	1001 9574
	2	1001 9574	1001 9574
	3	1001 9574	1001 9574