


Vehicle conversion

# ANCHORAGE RAIL SOLUTIONS

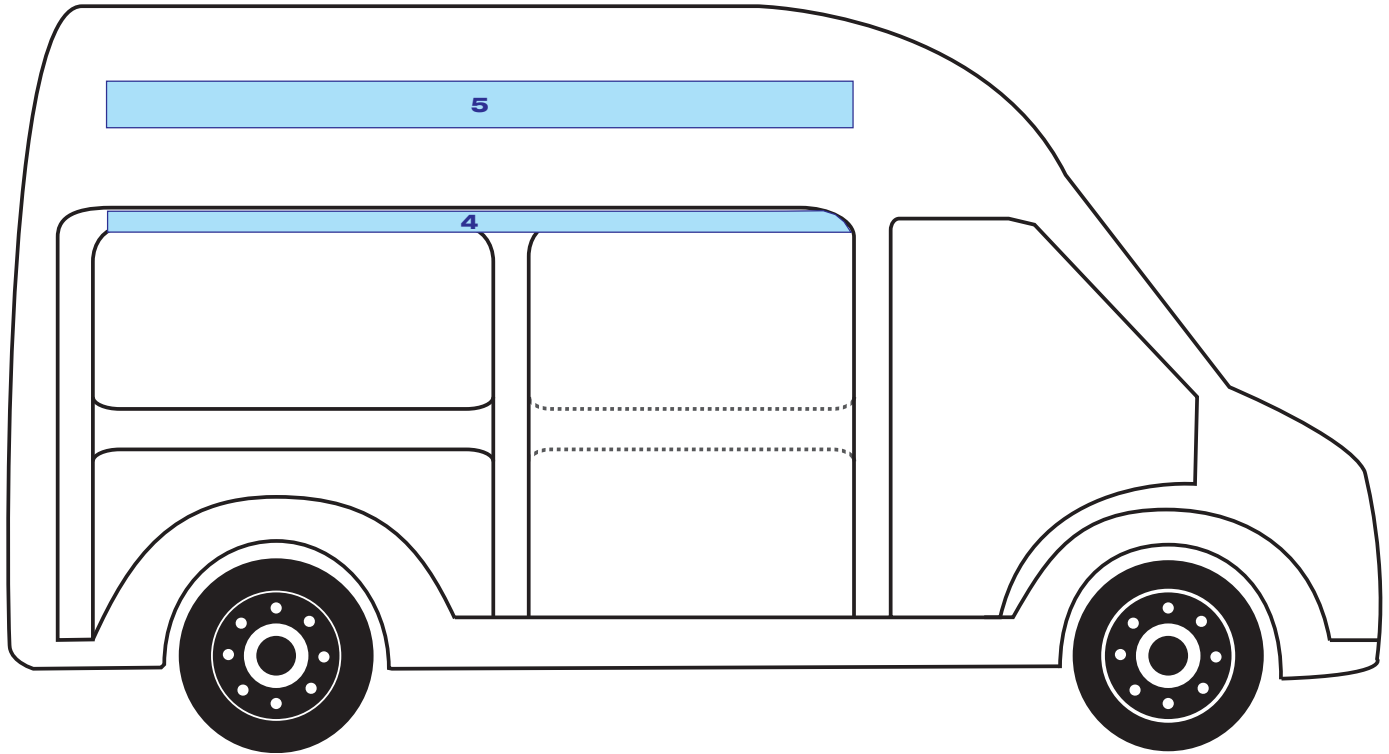

Vehicle Model without Trim	Area	Assembly material mounting rail 1 m	Assembly material mounting rail 3 m	Mounting rail 1 m	Mounting rail 3 m
Boxer / Ducato / Jumper	4	1001 9571	1001 9572	H150 132	H150 136
Ford Transit	4	1001 9578	1001 9579	H150 132	H150 136
NV400 / Movano / Master	4	1001 9578	1001 9579	H150 132	H150 136
	5	1001 9578	1001 9579	H150 132	H150 136
Volkswagen T5/T6	4	1001 9578	1001 9579	H150 132	H150 136
Sprinter / Crafter	4	1001 9680	1001 9681	H150 132	H150 136

