


Smartseat Easy armrest assembly instruction

SMARTFLOR
Flexibility inside



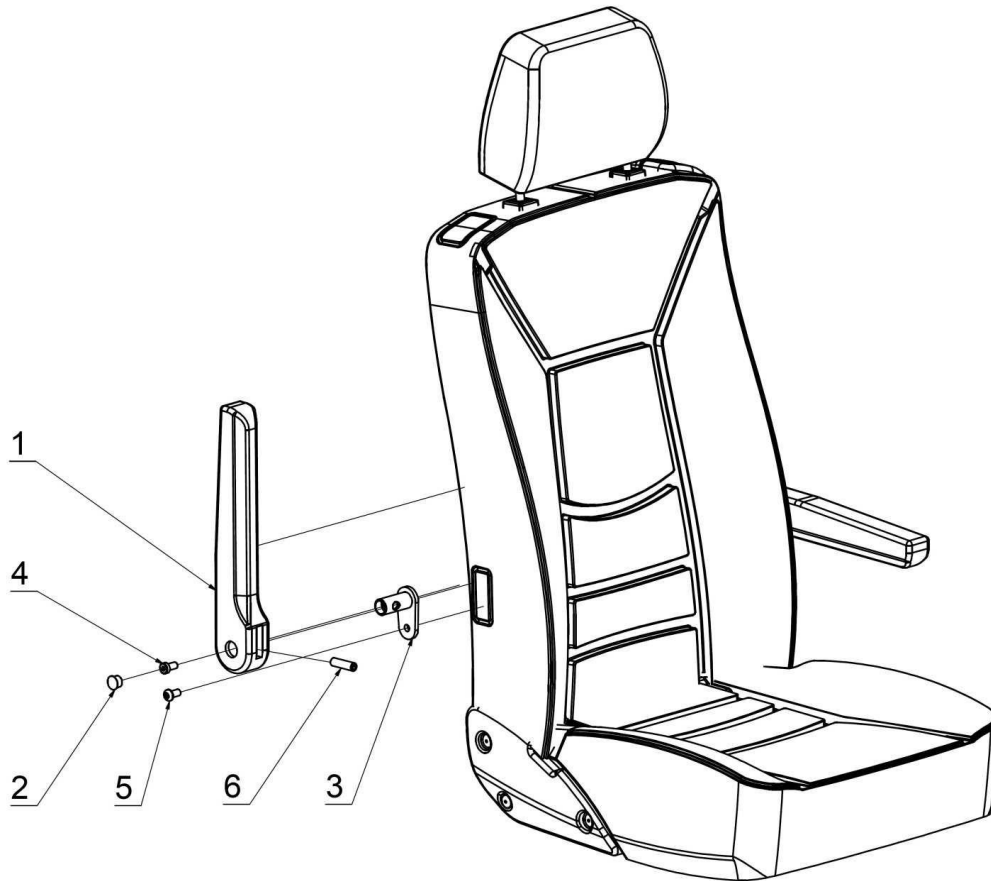


Picture 1 Armrest assembly in Smartseat Easy

- 1. armrest
- 2. plug
- 3. armrest adapter
- 4. M8x20 head socket cap screw
- 5. M8x16 round head socket cap screw
- 6. M8 special screw(NZ-0340)

1. Tools

- Hexagonal key nr 5
- Hexagonal key nr 6
- Rubber hammer
- needle
- utility knife

2. Components

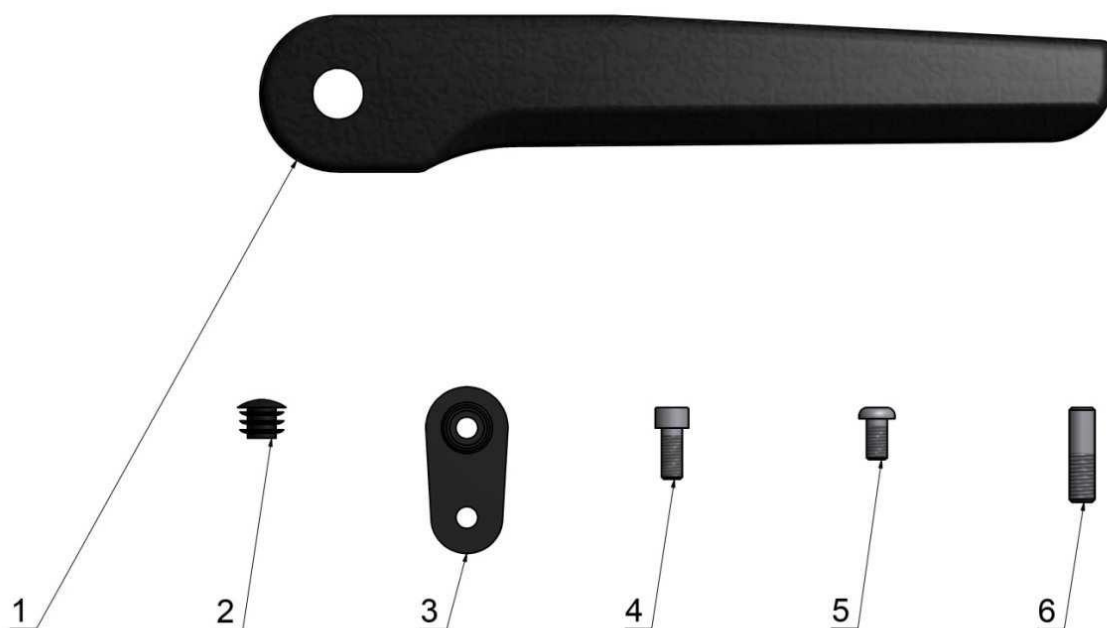


Picture 2 components Armrest


1. armrest
2. plug
3. armrest adapter
4. M8x20 head socket cap screw
5. M8x16 round head socket cap screw
6. M8 special screw (NZ-0340)

3. Step by step instruction

3.1. Find fixing points in seat using needle (picture 3). The fixing points are located in $440\pm5\text{mm}$ and $475\pm5\text{mm}$ measured from the top of backrest (picture 4).

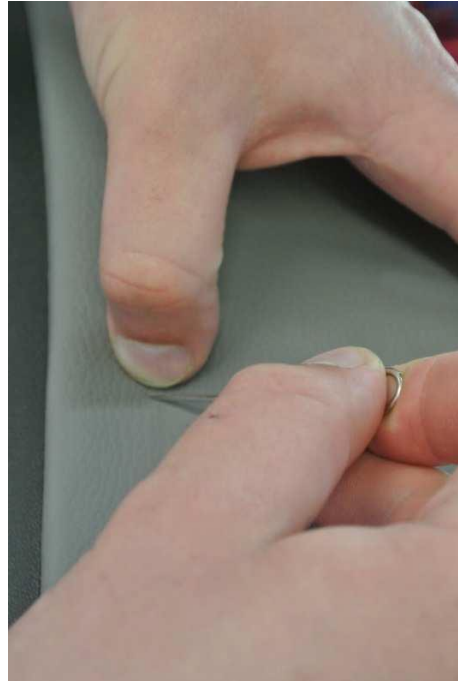

Picture 3. Signify holes in a seat

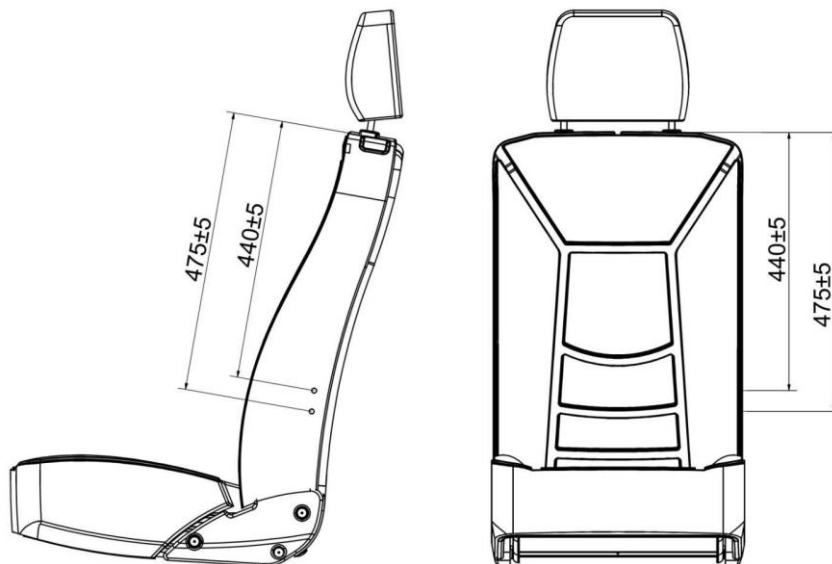

Picture 4. Position of fixing points in seat.


3.2. Cut a round holes using utility knife (picture 5).



Picture 5. Holes in a seat after cutting.

3.3. Polyurethane armrest

3.3.1. Screw armrest adapter in a seat. Use M8x20 head socket cap screw and M8x16 round head socket cap screw. M8x20 head socket cap screw goes into armrest adapter tube and M8x16 goes into armrest adapter plate. Attention, armrest adapter in assembled in different ways in different types of seats. Armrest adapter assembly is shown in picture 6.

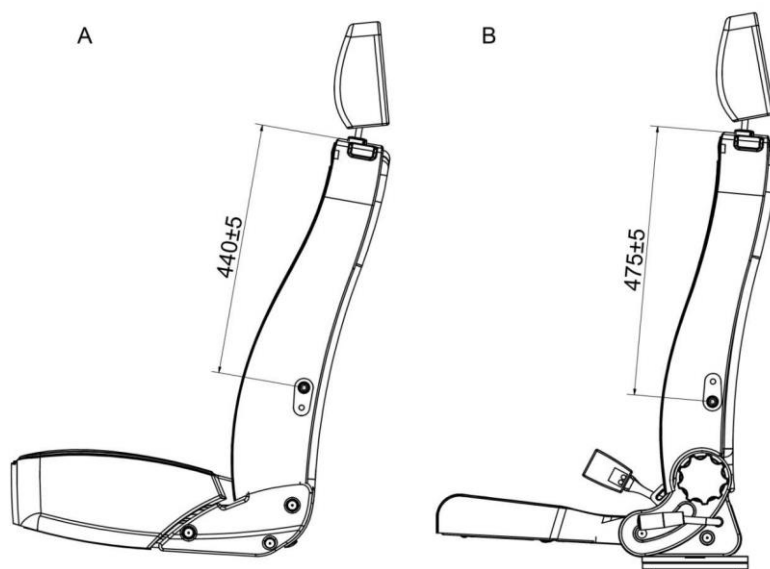

*Picture 6. A. armrest adapter in Smartseat Easy/ Smartseat Easy Reclining;
B. armrest adapter in Smartseat Easy Turny.*

3.3.2. Put armrest on armrest adapter using rubber hammer. The armrest is in the right position, when you see hole in armrest adapter (picture 7).



Picture 7. Armrest assembled to the seat.

3.3.3. Turn armrest in a vertical position to see a hole in armrest adapter and screw M8 special screw in armrest adapter (picture 8).



Picture 8. M8 special screw in armrest adapter.

3.3.4. Put the plug in armrest adapter (picture 9).



Picture 9. Plug in armrest adapter.

3.4. Upholstered armrest

Prepare upholstered armrest before you put it on armrest adapter.

3.4.1. Find hole in one side of upholstered armrest (picture 10).



Picture 10. Signify holes in a upholstered armrest.

3.4.2. Cut a round hole in upholstered armrest using utility knife as you see in picture 5. Attention, cut only one hole for assembly. Hole is necessary to install armrest on armrest adapter. Upholstered armrest doesn't have a plug.

3.4.3. Open zip on upholstered armrest (picture 11). Back to point 3.3.2 and 3.3.3. After that close the zip.



Picture 11. Opened zip in upholstered armrest.