



Mercedes-Benz




CONVERSION INFORMATION

Smartfloor Revolution



Mercedes-Benz Sprinter | Volkswagen Crafter

SMARTFLOOR
Revolution

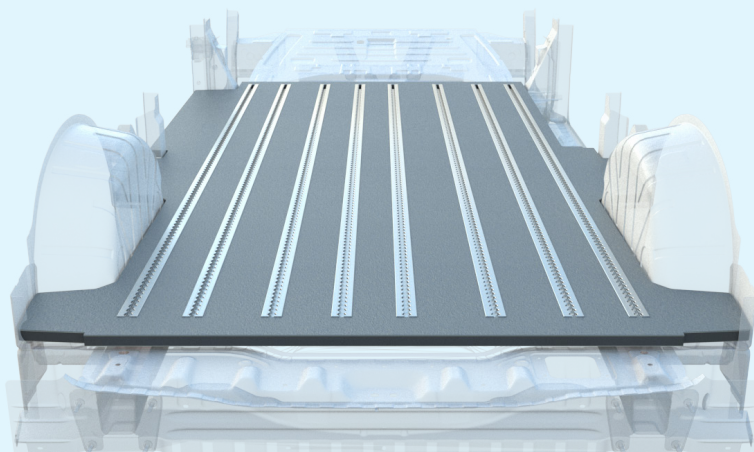

SMARTFLOOR B.V. | Bedrijvenpark Twente 415 | 7602 KM Almelo
Tel. +31 546 45 55 65 | www.smartfloor.nl

Member of
AMF-Bruns group



Vehicle information

Type code: 906/907/910/2E
Length: L1/L2/L3/L4

Commercial name: Sprinter / eSprinter / Crafter
Tested: R14, R16, R17, R145
Category: M1, M2, M3, N1, N2, N3


Smartfloor Revolution - Possibilities

- 1 The minimum possible rail length is 1 meter.
- 2 Rail has a minimal offset distance of 50mm to the back of the floor.
- 3 Rail has a minimal offset distance of 50mm to the front of the floor.
- 4 Rail has a minimal distance of 42,5mm from center Rail to wheelarch contour.
- 5 The minimal center to center distance between rails is 85mm (156mm for mounting seats).
- 6 Alu profiles are always positioned in the travel direction.
- 7 The SF Revo floor-sheet must be installed over the entire width and length of the vehicle floor.



ATTENTION:


- An unique alu mounting strips kit must be used.
- Use Lock Plates for mounting when using our standard seats and legs. It is allowed to use our U-profile instead of Lock Plates.
- It is allowed to mount the Smartseats in the opposite travel direction, without the use of Lock Plates at the front side of the floor.

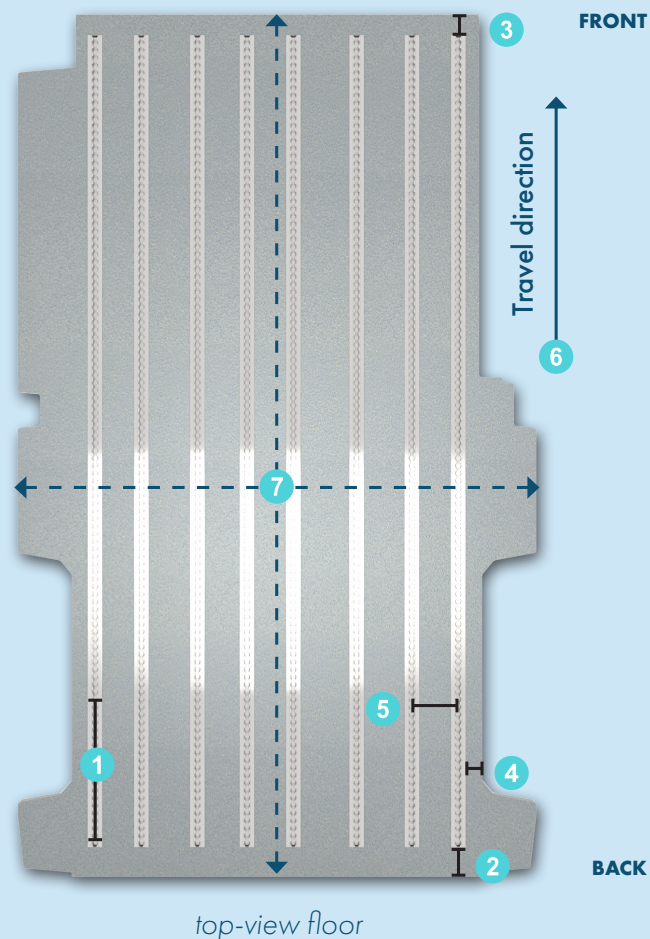

Tested seats and legs

Smartseats

Smartseat Easy
Smartseat Easy XL
Smartseat Easy Reclining
Smartseat Easy Reclining XL
Smartseat Care RV

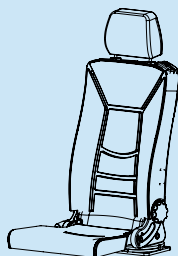

Smartlegs

Smartleg 290
Smartleg 290 WW
Smartleg 290 WW USA

Smartlegs Alu

Smartleg Alu 290
Smartleg Alu 290 WW
Smartleg Alu 290 WW USA

Fixed legs

Fixed leg 235/290 TN