


Floors fitted in accordance with this manual comply with EU directives.



1. Place the Smartlegs Legs in the rails.

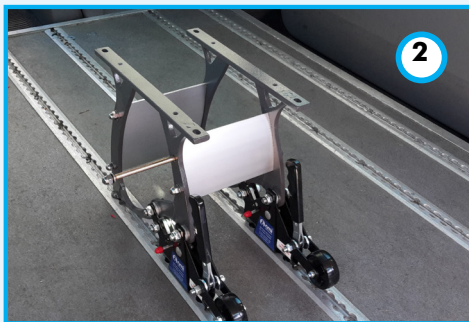

2. Place the Spacer plates between the Smartlegs using the threaded rod.



3. Mount the chair to the Smartlegs Legs using the mounting brackets and hex bolts. Quality 10.9 or higher nuts and bolts. First mount all nuts and bolts before securing them. Secure these bolts with a minimum torque of 20 Nm.



4. Now place all cushions.



5. If the Smartlegs are fitted with Wheelie Wheels, the chair can be moved without first lifting it up.

