# SMARTFLOOR INSTALLATION GUIDE




### **SEAT ARM REST**

Step 1: Locate the screw holes under the seat cover... on the side of the seat by feeling with your finger.



Step 2:
With a sharp
pointing tool,
carefully make
two holes through
the seat cover,
carefully make two
small crosswise
cuts within the hole
diameter.

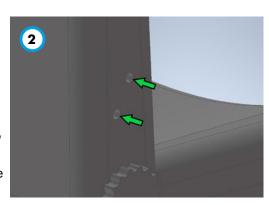

Sitting Position SEAT LEFT ARMREST

Sitting Position SEAT RIGHT ARMREST



Step 3: To assemble the armrest(s)
Determine which side is needed and
follow instructions by inserting the screw
first than sliding the anchor bracket into
the armrest body side hole.



Step 4: Insert bolt in the armrest side hole making sure it drops all the way through the bracket.






# SMARTFLOOR INSTALLATION GUIDE




### **SEAT ARM REST**

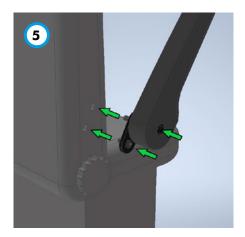

Step 5: Insert and tighten both screws.



Step 6: Insert locking screw into the slot on the armrest and tighten it.

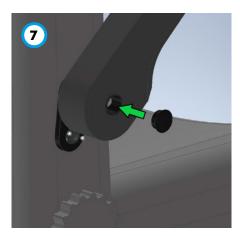

Step 7: Insert plastic cap covering the side hole and press it.

#### NOTE: We recommend using low to medium strength thread lock on the mounting screws/bolts.

#### **NORTH AMERICA**

AMF-Bruns of America 1797 Georgetown Road Hudson · OH 44236 Phone: 1 877-506-3770 EM: info@amfbrunsamerica.com WEB: www.amfbrunsamerica.com

#### **MIDDLE EAST & NORTH AFRICA**

AMF-Bruns MENA
Bisco FZCO · Silicon Oasis
LIU4 Units C8 & C9 · Dubai
Phone +971 4 3207123
EM: mena-office@amf-bruns.ae
WEB: www.amf-bruns.ae

## NETHERLANDS, BELGIUM AND LUXEMBOURG

SMARTFLOOR B.V.
Bedrijvenpark Twente 415
7602 KM Almelo
Nederland
Phone: +31 546 45 55 65
EM: info@smartfloor.nl

WEB: www.smartfloor.nl

#### **GERMANY / EUROPE**

AMF-Bruns GmbH & Co. KG
Hauptstraße 101
D-26689 Apen
Phone: +49 44 89 72 71 01
EM: hubmatik@amf-bruns.de
WEB: www.amf-bruns.de

#### **SOUTH AFRICA**

AMF-Bruns South Africa
Shoprider
92 Jakaranda Street
Unit # 13 Dimond Park
Hennopspark · CENTURION
Phone +27 12 653 1168
EM: info@amf-bruns.co.za
WEB: www.amf-bruns.co.za

#### **ASIA**

Smartfloor Seating (Thailand) Co.
Kunwang Place 165/86
T.: Sanprapao A.: Sansai
Chiang Mai 50210 Thailand
Phone: +66 81 381 5207
EM: info@samrtfloor.nl

## UNITED KINGDOM AMF-Bruns UK LTD

Unit 3, Parkway Four Longbridge Road Trafford Park Manchester · M17 1SW Phone: +44 161 872 7951 EM: hubmatik@amf-bruns.de WEB: www.amf-bruns.com

The Global Leader In Wheelchair Securement and Occupant Restraints Since 1958.



